




Sophix TAB-730g Speakers Replacement

Is there any sound coming from the speakers? If not, this guide will walk you through the steps to replace your speakers.

Written By: JT Hiquet

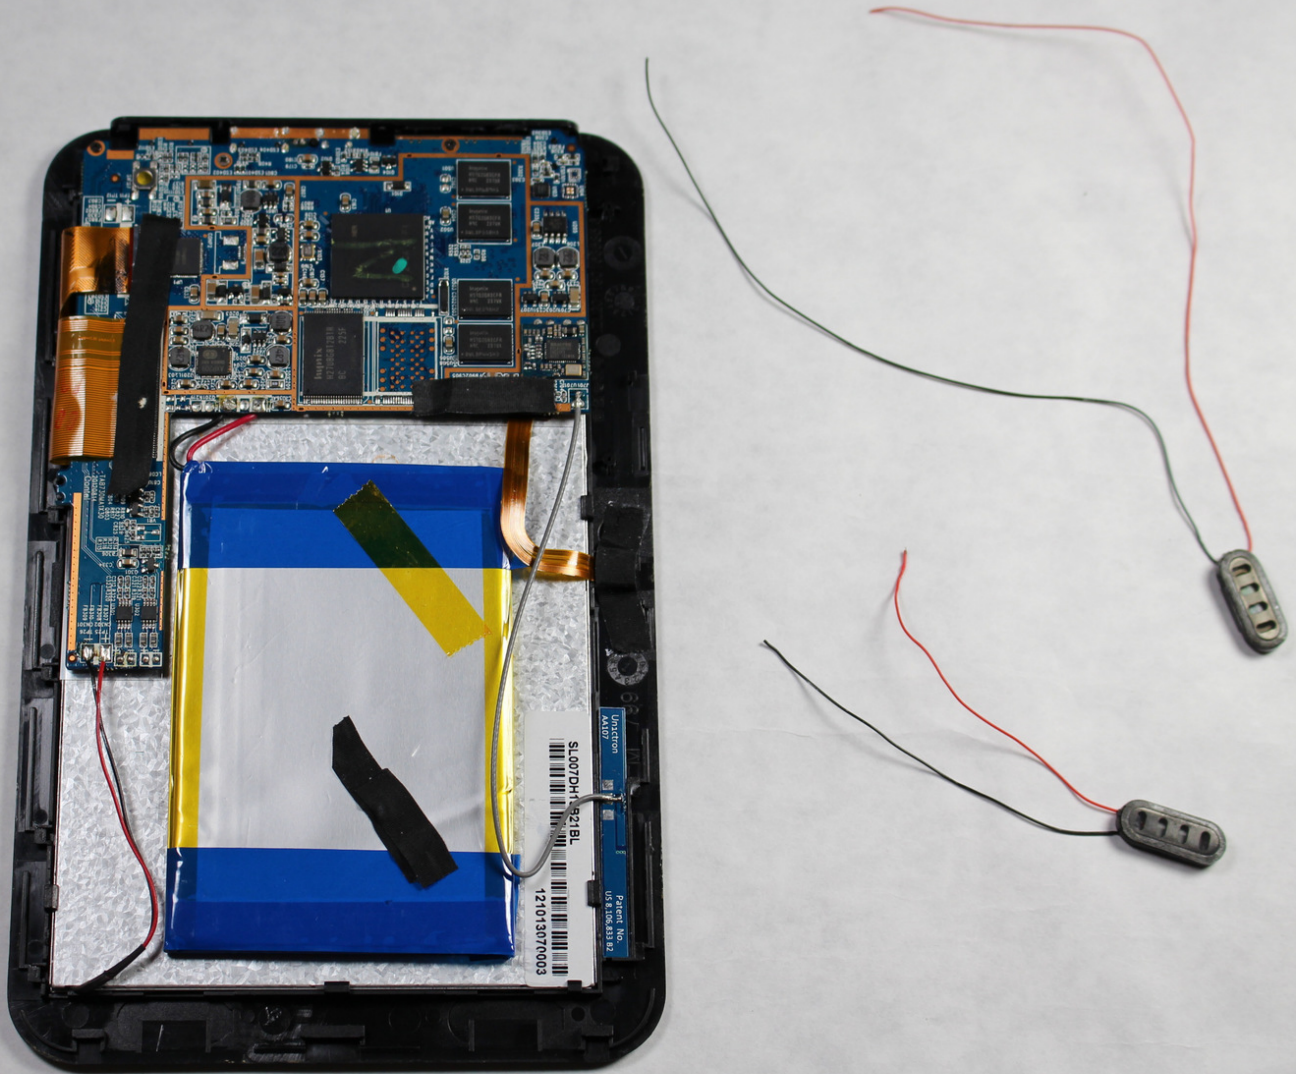

INTRODUCTION

This guide will teach you how to remove the speakers. This will allow you to then replace the speakers the same way you take them off. In this guide, the items needed are a screwdriver and a soldering iron.



TOOLS:

- [Soldering Station](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Speakers




- ❗ Remove the back cover to gain access to the mother board.
- Unscrew, with a 000 Philip's screwdriver, the 3.547 mm long screw located at the bottom of your tablet.

Step 2




- Firmly slide the cover in the direction indicated by the arrow, away from the ports, with your hand to remove the back cover.

Step 3

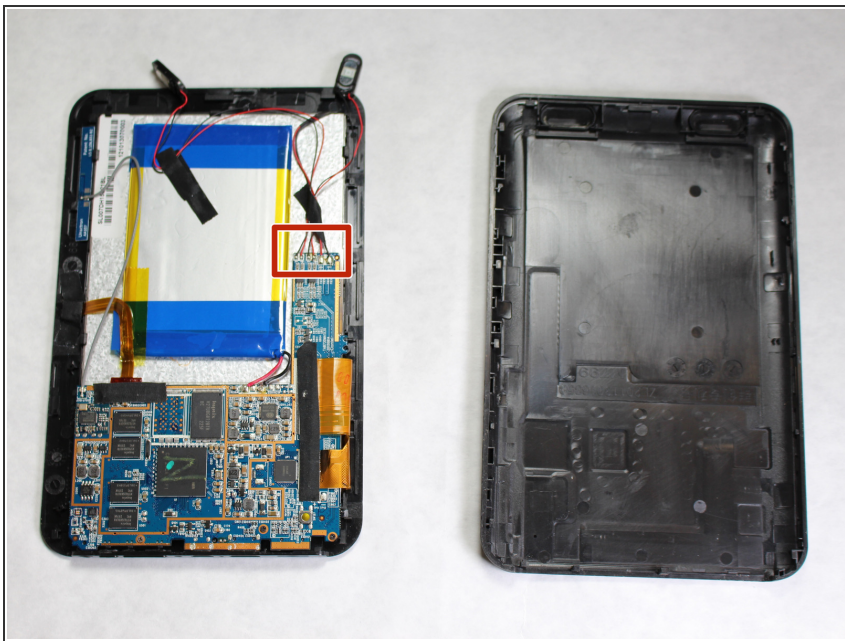

- Find the wires that connect the speakers to the mother board. (Follow the marker on the image)
- You will need a soldering iron to remove these. Start heating that up and proceed to step 4.

Step 4

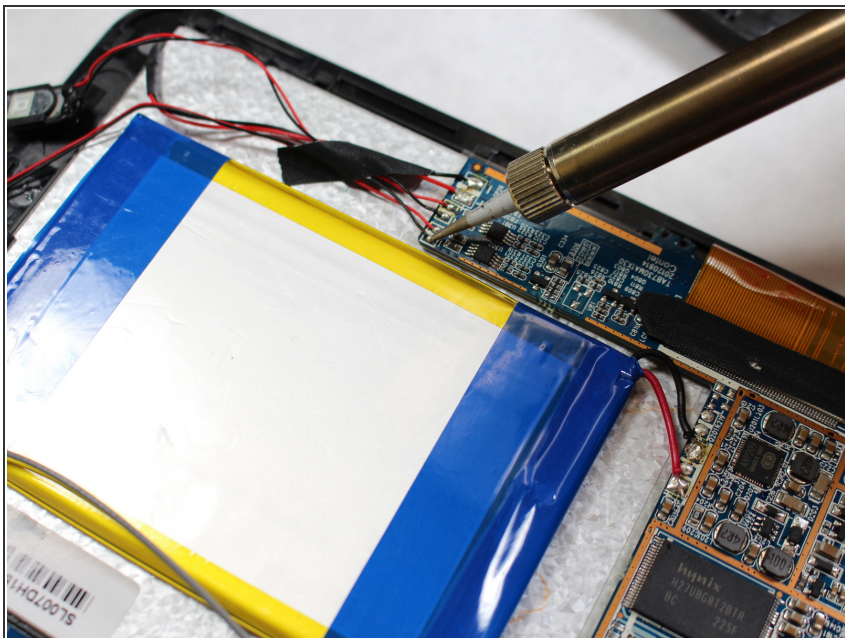

- Take the soldering iron and [desolder](#) the left-most (with the representation of the speakers being at the top of your device) four leads from the logic board to the speakers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 05:05:38 AM.